

# Product Information Sheet

# FyreWrap® Elite® 1.5 Duct Insulation – Grease Duct ASTM E2336 System

#### Introduction

Unifrax's FyreWrap® Elite® 1.5 Duct Insulation is a two-layer flexible enclosure for two-hour rated commercial kitchen grease ducts. FyreWrap Elite 1.5 Duct Insulation is tested per ASTM E2336 and is acceptable as an alternate to a traditional fire-rated shaft. Installed as a two-layer system, FyreWrap Elite 1.5 complies with the International Mechanical Code (IMC) and Uniform Mechanical Code (UMC). FyreWrap Elite 1.5 Duct Insulation offers the following product features:

- · 2-hour fire-resistance rating
- · Alternate to shaft enclosure
- · Complies with IMC and UMC
- Tested per ASTM E2336
- · Two-layer system; inner layer utilizes butt joint
- High-temperature, biosoluble insulation
- · Zero clearance to combustibles, at any location
- GREENGUARD listed for Microbial Resistance



FyreWrap® Elite® 1.5 Duct Insulation

### **Product Components**

Core Material: FyreWrap Elite 1.5 incorporates Insulfrax® Thermal Insulation as its core material. Insulfrax is a high-temperature insulation made from a calcia, magnesia, silica chemistry designed to enhance biosolubility. It provides excellent insulation in a noncombustible blanket product form.

Encapsulating Material: The core insulation blanket is completely encapsulated in an aluminum foil fiberglass reinforced scrim covering. This scrim provides additional handling strength as well as protection from grease, moisture absorption and tearing.

#### **Typical Product Properties**

ICC Evaluation Services	Evaluation Report ESR-2224	
Intertek Laboratories (OPL) Listed, File 14870	Duct System: Design No. UNI/BI 120-02, UNI/WA 120-01	
ASTM E2336	-	
ASTM E2336 Internal Grease Duct Test	Zero Clearance to Combustibles at all locations on wrap	
ASTM E119 Full Scale Engulfment Test	2-hour Fire Resistance Rating	
ASTM E119 Vertical Wall Test	2-hour Fire Resistance Rating	
ASTM E84, UL 723, ULC S102.2 – UL File No. R14514	Unfaced Blanket Encapsulated	
Flame Spread/Smoke Developed Rating	Zero/Zero <25/<50	
ASTM E814 Firestop Test	Firestop System: UNI/FRD 120-19, UNI/BI 120-02	
F-Rating = 2 Hrs., T-Rating = 2 Hrs.		
ASTM E136 Non-Combustibility Test	Passes	
ASTM C518 Durability Test	Passes; R-Value = 4.8 per inch at 75°F	
ASTM C518 Thermal Resistance	R-Value of Elite 1.5 (1½") = 7.2	
ASTM D6329-03 Microbial Resistance	Resistant to Mold Growth	
California State Fire Marshal Listing	No: 2440-1478:100	

Complies with: NFPA 96 (all editions), 1997 ICBO Uniform Mechanical Code (UMC), 1997 ICBO Uniform Building Code (UBC), 2000, 2003, 2006, 2009, and 2012 International Mechanical Code (IMC), 2000, 2003, 2006, 2009, and 2012 IAPMO UMC (Uniform Mechanical Code).















### **Typical Product Parameters**

Thickness	1.5"
Nominal Density	6pcf
Standard Product Form	Scrim Encapsulated
Product Availability	24"w x 25LF
	48"w x 25LF

#### Installation

The FyreWrap Elite 1.5 Duct Insulation ASTM E2336 System consists of a fully encapsulated, two-layer system applied directly to the duct surface. The insulation system may be installed at zero clearance to combustibles at any point. To minimize waste, FyreWrap Elite 1.5 should be rolled out tautly before measuring and making any material cuts.

# Butt Joint Both Layers Wrap Option (For ducts 24" x 24" or less)

For ducts 24" x 24" or less, both layers of wrap can be installed with transverse (perimeter) joints butted and minimum 3" longitudinal overlaps located on the topside of horizontal ducts. Stagger transverse butt joints by 12" between the first and second layers of wrap. Both layers of wrap can be temporarily secured with 1" wide filament tape. After the second layer of wrap is installed, place carbon or stainless steel bands (min. ½" wide, .015" thick) on both sides of all transverse butt joints 2½" on center from the joint and in the field area between the butt joints 9" on center. Tighten banding to firmly hold the wrap system in place but not so tight as to cut or damage the blanket and secure with minimum 1" long steel crimp clips. Seal all second layer

transverse butt joints and exposed blanket edges with minimum 3" wide aluminum foil tape. Pins are NOT required when utilizing this installation method.

#### **Overlap Techniques**

The first layer can be installed with transverse (perimeter) joints butted and minimum 3" longitudinal overlaps on the topside of horizontal ducts. All overlaps for the second, or outer layer, are required to be a minimum of 3". For the second layer, transverse (perimeter) overlaps of adjacent blankets may be installed using one of the following three methods and as shown in Figure 2.

### **Telescoping Overlap Wrap Technique:**

This wrap technique is the most common method of installing FyreWrap Elite 1.5 where each adjacent blanket has one edge exposed and one edge covered by the next blanket, to form a 3" overlap.

Cut the first piece of inner layer insulation to a length sufficient to wrap around the duct and provide a 3" longitudinal overlap on the topside of the duct. Install the adjacent inner layer piece so that the blanket edge is butted against the preceding piece, forming a tight perimeter joint. This piece also requires a 3" longitudinal overlap on the topside of the duct. Space the starting edge of the outer layer a maximum 3" from the exposed edge of the inner layer. All joints on the second layer require a minimum 3" overlap. Ends of the outer overlaps occur on the topside of the horizontal section and backside of the vertical section of the duct, alternating nominal 8" on either side of the longitudinal centerline with each successive wrap piece. All cut edges shall be sealed with aluminum foil tape.

Figure 1. Butt Joint Wrap Option


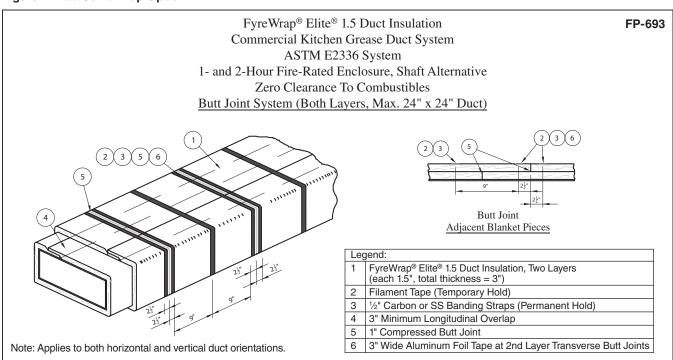




Figure 2. 2-layer detail

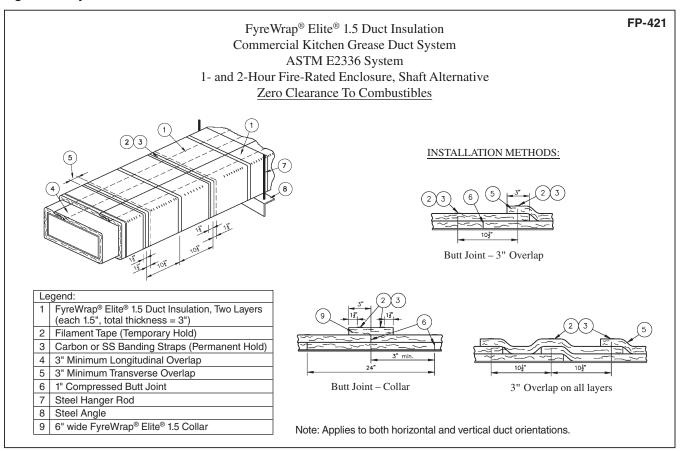

## **Checkerboard Overlap Wrap Technique:**

This installation uses a 3" overlap pattern with both edges of each alternating blanket covered by each adjacent blanket whose edges are exposed. The overlap joints in alternate layers of blanket resemble a checkerboard pattern in the completed installation. This technique is often utilized when a small section of duct wrap must be repaired.

#### **Butt Splice with Collar Wrap Technique:**

This wrap technique permits installation with the blanket edges butted together and a 6" wide collar of blanket that is centered over the butt splice, overlapping each adjacent blanket 3". The collar can be field fabricated from FyreWrap Elite 1.5 Duct Insulation rolls or purchased separately.

#### **Vertical Duct Runs (Optional)**

For vertical runs, the insulation can be applied to the duct in a continuous length applied parallel with the length of the duct as opposed to wrapping around the duct. All overlaps are to be maintained at a minimum 3" and are to occur a minimum of 6" from any corner of the duct. The second layer is to be centered over the overlapped seam of the first layer. Pins spaced a maximum 8" o.c. are to be placed at the centerline of all vertically oriented overlaps.

# **Attachment Options**

Three attachment options are available for installers. Choices are limited by the duct width dimension. Details on each option are provided below.

#### Banding Only: For Duct Widths 24" or Less

To temporarily secure the insulation, optional use of filament tape is permitted. Place carbon steel or stainless steel bands (min.  $\frac{1}{2}$ " wide, nom. 0.015" thick)  $\frac{1}{2}$ " from each edge of each second layer blanket overlap. Place additional bands in the field area between the second layer overlaps on maximum  $\frac{10}{2}$ " centers. Tighten banding to firmly hold the wrap system in place but not so tight as to cut or damage the blanket and secure with minimum 1" long steel crimp clips. No bands are required on the first layer. Pins are NOT required when this banding technique is used.

# Banding and Pins: For Duct Widths ≤ 49"

Weld 12-gauge steel insulation pins to the underside of horizontal runs and backside (side of duct having largest dimensions) of vertical runs. Place pins at maximum 12" rows and on maximum 10½" centers. To temporarily secure the insulation, optional use of filament tape is permitted. Impale FyreWrap Elite 1.5 Duct Insulation over the pins and hold in



place with minimum 2½" square or 1.5" round galvanized steel speed clips (washers). Turn down or cut off exposed ends of pins to eliminate safety hazards. Locate carbon steel or stainless steel bands (min. ½" wide, nom. 0.015" thick) 1½" from each edge of second layer overlap joints. Locate a second band midpoint between the second layer overlapped joints, approximately 10½" on center. Tighten banding to firmly hold the wrap system in place but not so tight as to cut or damage the blanket and secure with minimum 1" long steel crimp clips. No bands are required on the first layer. Cup head style pins are also permitted and shall be located at the same spacing as pre-welded pins.

#### Pins Only: For Duct Widths > 49"

Weld 12-gauge steel insulation pins on all sides of the duct. Place insulation pins in rows (perpendicular to the length of the duct) spaced maximum  $10\frac{1}{2}$ " on center. Pins in each row are maximum  $6\frac{3}{4}$ " from each duct edge and maximum 12" on center. Locate insulation overlaps so they are centered on the pins. Impale FyreWrap Elite 1.5 Duct Insulation over the pins and hold in place with minimum  $2\frac{1}{2}$ " square or  $1\frac{1}{2}$ " round galvanized steel speed clips (washers) to keep the system from sagging. Turn down or cut off exposed ends of pins to eliminate safety hazards. Cup head style pins are also permitted and shall be located at the same spacing as pre-welded. The pins only attachment method can be used for duct widths less than 49", but is optional.


#### **Access Door**

Field fabricated and prefabricated grease duct access doors are permitted for use with FyreWrap Elite 1.5 Duct Insulation. Installation details are provided below and in Figure 3.

Field fabricated access doors are protected with three layers of FyreWrap Elite 1.5 Duct Insulation. A gasket of 0.5" thick unfaced FyreWrap or ceramic fiber blanket is initially installed between the duct and the access door cover. Weld

threaded rod to each corner of the access door opening. Cover with hollow steel tubes (optional) for easy removal of blanket. Weld at least four steel insulation pins to the outside of the door cover panel, 1" from each corner. Cut through the two layers of FyreWrap Elite 1.5 Duct Insulation already covering the duct and access door opening. Leave the interior piece in place. Cut back the outer layer to form an opening with perimeter dimensions that extend 1" beyond the inner layer. Cut a piece of FyreWrap Elite 1.5 Duct Insulation that matches the dimensions of the opening and install over pins to fit tightly within the existing material. Cut an additional piece of insulation with perimeter dimensions that extend 1" beyond the layer below. Install over the insulation pins. Throughout the installation process, seal all cut edges with aluminum foil tape. Secure with washers and bend over excess pin lengths to eliminate safety hazards. Place washers on threaded rod and secure with nuts. Do not install banding over this area. See Figure 3 for details.

Prefabricated – Ductmate Ultimate and Ductmate F2-HT prefabricated access doors are permitted and must be installed in accordance with Ductmate Industries, Inc. installation instructions and the applicable code. The prefabricated access door is protected with three layers of FyreWrap Elite 1.5 Duct Insulation. The first layer is cut to the size of the door. A successive layer (two additional layers) is sized to create an overlap of 1" beyond the layer immediately below. All edges of insulation blanket must be protected with aluminum foil tape. A No. 16 gauge outer plate the same dimension as the outer layer of insulation blanket is held in place over the insulation using threaded rod and wing nuts. The outer plate is supplied with the Ultimate door and F2-HT doors. Access doors are available from Ductmate Industries, Inc. Contact www.ductmate.com or 1-800-245-3188 for additional information or local distributors. Ask for the Access Door Product Line Manager.

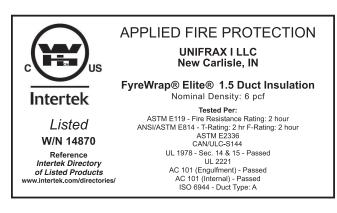


For additional information about product performance or to identify the recommended product for your fire protection application, please contact Unifrax at 716-768-6500 and ask for Fire Protection Application Engineering.



Refer to the product Material Safety Data Sheet (MSDS) for recommended work practices and other product safety information.



Figure 3. Access Door

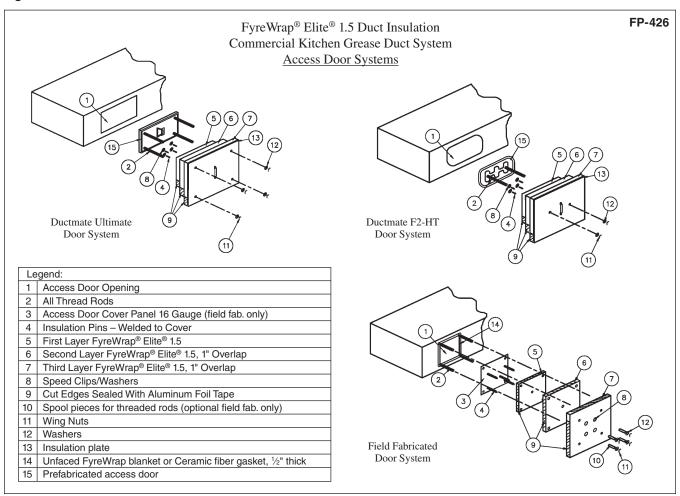

#### **Duct Support**

Horizontal duct support systems do not require FyreWrap insulation when constructed using a minimum 3/8" diameter uninsulated all-thread steel rod and 11/2" x 11/2" x 1/8" uninsulated steel angle spaced a maximum 60" on center along the length of the duct. A minimum clearance of 1" is required between the protected duct and the steel rod. To increase hanger spacing to 72" on center, 1/2" all-thread steel rod and 2" x 2" x 1/4" steel angle are required. Vertical duct support systems do not require FyreWrap insulation when constructed using minimum 11/2" x 11/2" x 1/4" steel angle brackets located on opposite sides of the duct, on the top and bottom of each floor-ceiling assembly. The supports are attached to the duct with welds. Maximum spacing between vertical supports shall be established by structural calculations in accordance with the applicable code, that are submitted to the building official for approval. See Figure 4 for details. For all other duct support configurations, please contact Unifrax at 716-768-6500 and ask for Fire Protection Application Engineering.

# **Firestop Systems**

Where ducts insulated with FyreWrap Elite 1.5 Duct Insulation pass through fire-rated walls and floors, the penetration opening shall be firestopped to maintain the fire rating of the assembly. Firestop Systems acceptable for use with FyreWrap Elite 1.5 Duct Insulation ASTM E2336 System at the time of printing are detailed below. See Figures 5-7 for details. Additional firestop systems may be developed and available for use. Contact Unifrax at 716-768-6500 and ask for Fire Protection Application Engineering for additional details and assistance or visit the test lab web site for the latest documentation.

Figure 4. Firestop Installation

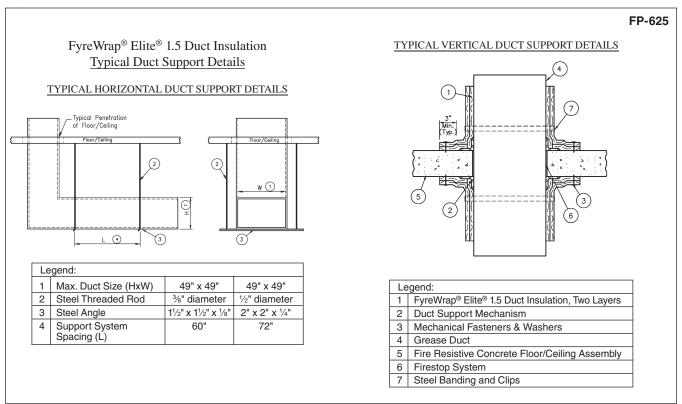


Figure 5. Firestop Installation

FyreWrap® Elite® 1.5 Duct Insulation
Through Penetration Wall System
Intertek (OPL) Design No. UNI/FRD 120-19
2-Hour Fire Resistance Rating
F-Rating = 2 Hrs. T-Rating = 2 Hrs.

Le	egend:
1	Grease Duct, max. 4900 in <sup>2</sup> area, 70" max width
2	FyreWrap® Elite® 1.5 Duct Insulation, Two Layers
3	Unfaced FyreWrap® Elite® 1.5 (37/8", compressed 48%)
4	STI Spec Seal SSS, 5/8" depth
5	Fire-Resistive Gypsum Wall Assembly
6	Annular Space 0" to 31/2"

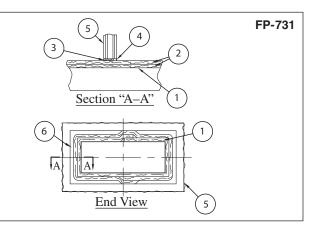


Figure 6. Firestop Installation


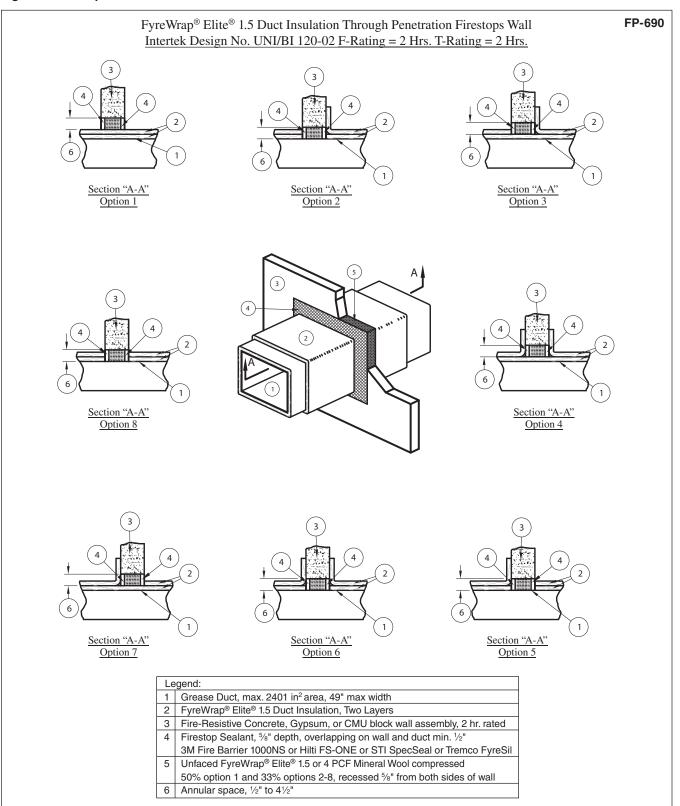




Figure 7. Firestop Installation

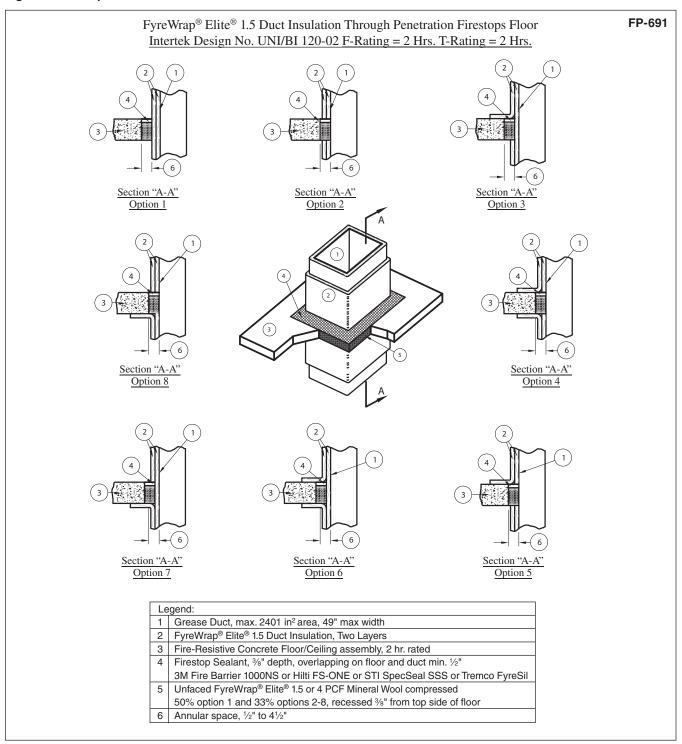

Form C-1495 Effective 3/15 © 2015 Unifrax I LLC All Rights Reserved Printed in USA Page 8 of 8

The following are registered trademarks of Unifrax: FyreWrap, Elite and Insulfrax.

The test data shown are average results of tests conducted under standard procedures and are subject to variation. Results should not be used for specification purposes.

Product Information Sheets are periodically updated by Unifrax. Before relying on any data or other information in this Product Information Sheet, you should confirm that it is still current and has not been superseded. A Product Information Sheet that has been superseded may contain incorrect, obsolete and/or irrelevant data and other information.

# **FyreWrap**

#### Unifrax I LLC

Corporate Headquarters 600 Riverwalk Parkway Suite 120 Tonawanda, NY 14150 Telephone: 716-768-6500

Internet: www.unifrax.com Email: info@unifrax.com